



RCRSMT06GZ

Universal Remote Control Owner's Manual

Manual del Propietario (parte posterior)

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada Regulatory Information

CAN ICES-3 (B)/NMB-3 (B)
Avis d'Industrie Canada
CAN ICES-3 (B)/NMB-3 (B)

SAVE THIS MANUAL AND THE CODE LISTS!

Remote controls can sometimes lose their programming when you change the batteries. Make sure you keep the manual and code lists in a safe place so that you can reprogram the remote if you need to.

Tip: This remote is already programmed to operate most RCA-branded TVs, DVD players, and satellite receivers. Just press the corresponding key—DVD-BLURAY for a DVD player, TV for a television, SAT-CABLE for a satellite receiver.

Step 1: Install your batteries

Your universal remote requires two AAA alkaline batteries (not included).

To install the batteries:

1. Remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Push the battery cover back into place.

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

Battery Saver

Your universal remote control saves battery power by automatically turning off if any key is pressed for more than 60 seconds. This saves your battery life should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

Step 2: Program your remote

To use this universal remote with your home entertainment system, first you need to program it to control your devices. There are four ways you can program the universal remote to operate your devices. Try them in the order listed.

- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device.
- The **Brand Code Search** searches through the codes for select brands of devices.
- The **Auto Code Search** goes automatically through all the codes for the device you're trying to control.
- The **Manual Code Search** lets you manually go through all the codes for the device you're trying to control.

Direct Code Entry


Direct Code Entry lets you enter a code from the accompanying code list for your brand of device.

TIP: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT-CABLE for satellite receivers or cable boxes, STREAMING 1/2 for streaming players, DVD-BLURAY for DVD and Blu-ray players, and AUDIO-SB for audio devices and soundbars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

1. Manually turn on the device you want to control.




2. Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.

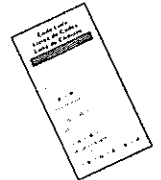


3. Press and hold the device key you want to program (the POWER key illuminates).

While you're holding down the device key, use your other hand enter the first five-digit code for your brand in the code list (the POWER key turns off after the first digit).

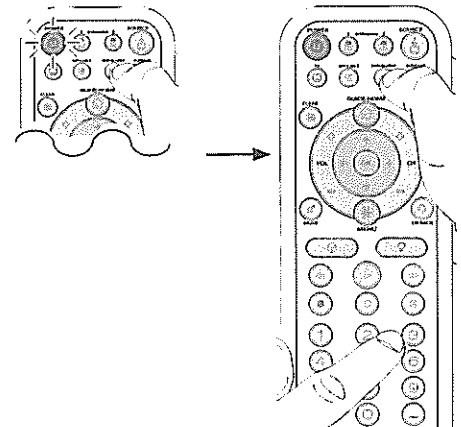

 - When you've finished entering the five-digit code, keep holding down the device key and look at the POWER key.



Is the POWER key illuminated?

YES: You're done! You've programmed this device key.

NO, it blinked four times and turned off: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 3 again.

NOTES

 
Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code in the list.

Remember to enter the code for future reference in the box provided in the Code Retrieval section of this manual.


If your brand isn't listed in the code list, use one of the Code Search methods to program the remote control. (Refer to the Auto and Manual Code Search methods.)

If you release the device key any time during the Direct Code Entry procedure, the POWER key blinks four times, and the process is exited. The last programmed code under the device key is retained.

- Wait until the POWER key comes on and stays on. Then release both keys.



- Look at the numbers you circled for your device's brand code number. Press those numbers on the remote keypad.

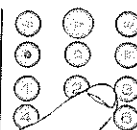

- Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.



Did your device turn off?

YES: Press the (stop) key to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your brand.

Keep pressing POWER every 2 seconds until your device turns off. When it does, press (stop).

Brand Code Search

The Brand Code Search goes through only the codes for one of the select brands listed in the accompanying code list. If your brand of device is listed, this search can be very quick and easy.

TIPS: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT-CABLE for satellite receivers or cable boxes, STREAMING 1/2 for streaming players, DVD-BLURAY for DVD and Blu-ray players, and AUDIO-SB for audio devices and soundbars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

To exit without saving a new code at any point in the Brand Code Search, press the CLEAR key.

- Manually turn on the device you want to control.




- Find your device's brand in the Brand Code list section of the accompanying code list. Circle the number for your brand and keep the list handy.



- Press and hold the device key you want to program. The POWER key illuminates.

While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

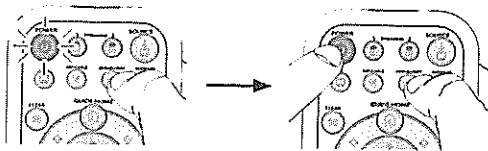

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Brand Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Brand Code Search. If your device hasn't turned off yet, try different search method.

Testing the Code for Maximum Functionality

- Try a variety of the device's functions with the remote. If some device features don't work, go to the next step to try a different code.
- Repeat the Brand Code Search from the beginning. When the device turns off for the first time, don't press the (stop) key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
- Once the unit turns back on, you have found another code that operates the device. Press the (stop) key.
- Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's function programming is complete. If the code stored does not give maximum functionality, try another code.

 
Auto Code Search

The Auto Code Search goes automatically through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.

TIPS: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT-CABLE for satellite receivers or cable boxes, STREAMING 1/2 for streaming players, DVD-BLURAY for DVD and Blu-ray players, and AUDIO-SB for audio devices and soundbars. To program a device key for a different type of device, see the Changing a Key's Device Type section.


To exit without saving a new code at any point in the Auto Code Search, press the CLEAR key.

1. Manually turn on the device you want to control.




2. Press and hold the device key you want to program. The POWER key illuminates.

While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

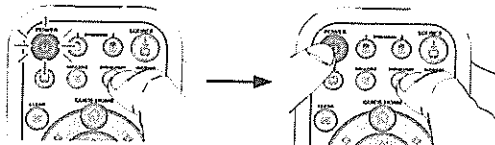

 3. Wait until the POWER key comes on and stays on. Then release both keys.



4. Point the remote directly at the front panel of the device you want to control. Press ▷ (play) on the remote and wait 5 seconds. The remote is testing a batch of 10 codes on your device.



Did your device turn off?

YES: Go to step 5.

NO: Press ▷ (play) again. The remote tests the next batch of 10 codes.

Keep pressing ▷ (play) every 5 seconds until your device turns off.

5. When your device turns off, press the ◀ (reverse) key on the remote and wait at least 2 seconds. The remote tries the last of the previous ten codes.



Did your device turn on?

YES: Press the □ (stop) key. You're done! You've programmed this device key.

NO: Press ◀ (reverse) again. The remote tests the next code in the batch.

Keep pressing ◀ (reverse) every 2 seconds until your device turns back on. When it does, press □ (stop).

Note: If you accidentally press the ◀ (reverse) key after your device turns on, press the ▶ (forward) key. Then, wait two seconds to see if your device turns off again.

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some device features don't work, go to the next step to try a different code.
2. Repeat the Auto Code Search Method from the beginning. When your device turns off, do not stop searching. Instead, with the unit now off, continue to press the ▷ (play) key every 5 seconds until the unit turns back on.
3. Once the unit turns back on, press the ◀ (reverse) key on the remote every 2 seconds until your device turns off again. When your device turns off again, press the □ (stop) key.
4. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Manual Code Search

The Manual Code Search lets you go one-by-one through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.

TIPS: The Manual Code Search method may take a long time because the remote searches through all of the codes in its memory one-by-one. If your brand is listed in the Brand Codes or the Code Lists, first try the Brand Code Search or the Direct Code Entry method.


Each device key is associated with a type of device—the TV is preset to search for TVs, SAT-CABLE for satellite receivers or cable boxes, STREAMING 1/2 for streaming players, DVD-BLURAY for DVD and Blu-ray players, and AUDIO-SB for audio devices and soundbars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

To exit without saving a new code at any point in the Manual Code Search, press the CLEAR key.

1. Manually turn on the device you want to control.




2. Press and hold the device key you want to program. The POWER key illuminates. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

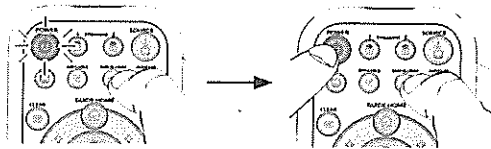


3. Wait until the remote's POWER key comes on and stays on. Then release both keys.
4. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device.



Did your device turn off?

YES: Press the  (stop) key to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your device.

Keep pressing POWER every 2 seconds until your device turns off. When it does, press .

TIP: Because there are so many codes, you may have to press the POWER key many times—possibly hundreds of times.

NOTES

Throughout the programming of each key, keep the remote pointed at the IR sensor of the device you are programming the remote to control.

 
 
Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Manual Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Brand Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some features of your devices don't work, go to the next step to try a different code.
2. Repeat the Manual Code Search and Entry Method from the beginning. When the device turns off for the first time, don't press the  (stop) key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the .
4. Test the key's functionality again by trying a variety of functions. If the code controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Tour of the Remote

In most cases, the keys on this remote perform the same functions as the keys on your original remotes once you've programmed this remote to operate your components. Many keys on this remote have other functions as well.

Illuminated POWER key serves as an indicator light to provide feedback.

Device keys (TV, SAT-CABLE, DVD-BLURAY, AUDIO-SB, STREAMING1/2) put the remote in the right mode to control your device.


The purple keys (STREAMING1/2, GUIDE-HOME, MENU) are the most used keys for streaming player.

GUIDE-HOME puts the remote in guide mode for satellite receivers or cable boxes, and accesses the home screen for streaming players.

CLEAR exits remote programming; it also performs the same functions as on your original remotes.

Arrow keys act as navigation keys in device guides and menu systems.

The SOURCE toggles through all video or audio sources connected to your TV or audio receiver.


 controls Samsung Hub functionality on TVs. It may also control similar functionality on other devices (see your device manual for information).

The — (dash) button lets you separate the main channel number from the sub-channel number (such as 59.1) when you're entering digital channel numbers directly.

Red, green, yellow, and blue keys access additional features on your cable box, satellite receiver, or Blu-ray disc player (see your device manual for details).

IMPORTANT

Because this remote controls more than one device, you must first "tell" the remote which device you wish to operate. That means, if you wish to operate your TV, you must first press the TV key to put the remote in the TV Mode. The remote stays in that device mode until you press a different device key. For example, if your remote is in TV Mode and you want to operate the DVD player, you must press the DVD-BLURAY key to change device modes.

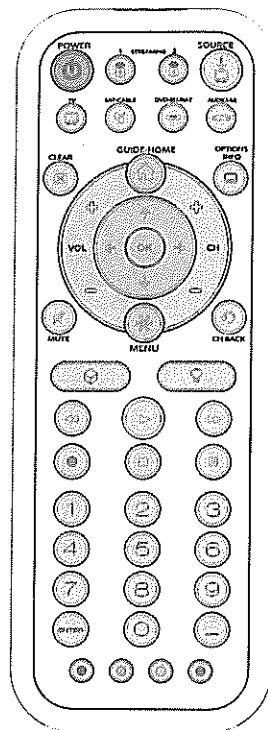

Actual model may vary from illustration

Advanced Functions

Changing A Key's Device Type

Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CABLE for satellite receivers or cable boxes, STREAMING1/2 for streaming players, DVD•BLURAY for DVD and Blu-ray players, and AUDIO•SB for audio devices and soundbars. To program these keys to control a different kind of device, you have to reassign them first.

Reassigning the DVD•BLURAY Key to Control a VCR

The DVD•BLURAY key defaults to control a DVD or Blu-ray player. If you want the DVD•BLURAY key to control a VCR, you must reassign it.

1. Press and hold the DVD•BLURAY key. The POWER key illuminates. Keep holding down the DVD•BLURAY key.
2. While holding down the DVD•BLURAY key, press and release the number 2 key on the keypad. The POWER key turns off.
3. Release the DVD•BLURAY key. The POWER key blinks two times and then turns off. The DVD•BLURAY key is now set to control a VCR.
4. Follow the directions in the auto, brand, direct entry, or manual code search to program the DVD•BLURAY key for your VCR.

Reassigning the AUDIO•SB Key To Control Other Devices

The AUDIO•SB key defaults to control an audio device or soundbar. If you want the AUDIO•SB key to control a different device (an additional TV, DVD, satellite or cable box, for example), you must reassign it.

1. Press and hold the AUDIO•SB key. The POWER key turns on.
2. While holding down the AUDIO•SB key, press and release the number key on the keypad for the device you wish to control (see the chart below). The POWER key turns off.

AUDIO•SB KEY CONTROLS:	
Additional TV	press 1
VCR or DVR	press 2
Additional DVD or Blu-ray	press 3
Audio device or soundbar	press 4
Additional satellite, cable box or streaming player	press 5

3. Release the AUDIO•SB key. The POWER key blinks two times and then turns off. The AUDIO•SB key is now set to control the device type you selected.
4. Follow the directions in the auto, brand, direct entry, or manual code search to program the AUDIO•SB key.

Volume Punch-Through

Volume punch-through allows the VOL and MUTE keys, when pressed in SAT•CABLE, DVD•BLURAY, or STREAMING1/2 modes, to "punch through" to TV or AUDIO•SB. Volume punch-through occurs automatically and allows you to control the volume without exiting the current mode. (If the DVD•BLURAY key has been programmed with a TV code, volume can punch through to this device as well.)

Notes: Volume punch-through does not occur in cases where the component code has its own volume/mute controls, such as some satellite receivers.

Volume punch-through sends volume commands to the last device you were controlling, either TV or AUDIO•SB, before the active device. For example, if you were controlling the TV before you started controlling your DVD player, the volume commands will "punch through" to the TV while you're in DVD•BLURAY mode.

Channel Lock

Channel lock automatically sends channel commands, like the CH, CH BACK, and 0-9 number keys, to your satellite receiver, cable box, or digital TV converter when you're in TV mode. This can save you keypresses if you use a device other than your TV to change channels.

To turn channel lock on:

 
1. Press and hold the device key for the device you use to change channels. While you're holding down this device key, use your other hand to press and hold the remote's CH up key at the same time.
2. Wait until the remote's POWER key comes on and stays on. Then release both keys.
3. Press ENTER to lock channel commands to this device.

To turn channel lock off:

1. Press and hold the TV key. While you're holding down the TV key, use your other hand to press and hold the remote's CH down key at the same time.
2. Wait until the remote's POWER key comes on and stays on. Then release both keys.
3. Press ENTER to start changing channels with your TV.

Code Retrieval

Once you've programmed the remote to control your devices, you may want to record the codes for future reference. If you used the Direct Code Entry method, this is easy. Just find the codes you entered and make a note of them in the boxes below. If you used one of the Code Search methods to program your remote or if you used the Direct Entry method but don't remember the code, you will need to retrieve each device's five-digit code. Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your devices, which is quick and easy.



1. Press and hold the device key (TV, SAT•CABLE, DVD•BLURAY, AUDIO•SB, STREAMING1/2) whose code you wish to retrieve. The POWER key illuminates. Keep pressing the device key.
2. While holding the device key down, press and hold the INFO key. The POWER key turns off. After holding down both keys for three seconds, the POWER key turns back on.
3. Release both keys. The POWER key remains on.
4. Starting with the number 1 key, press and release each number key on the keypad in the following order: 1-9, then 0. The number that causes the POWER key to blink is the first number of the code. As you find each number of the code, write it down for future reference.

Note: All TV codes begin with the number 1; all VCR and DVR codes begin with the number 2; all DVDs, the number 3; all audio devices, the number 4; and all satellite receivers, cable boxes, streaming players and DTV converters, the number 5.

5. Repeat step 4 until you have retrieved all five numbers in the code. After the fifth number is retrieved, the POWER key blinks briefly, then turns off.

TIP: To exit the Code Retrieval Mode at any time, press the CLEAR key.

Note: If you press an invalid key during the Code Retrieval process, the remote will not respond. If you do not press a valid Code Retrieval key (TV, SAT•CABLE, DVD•BLURAY, AUDIO•SB, STREAMING1/2, INFO, CLEAR), Code Retrieval times out after 15 seconds. The POWER key blinks four times, and then turns off.

TV CODE	SAT-CABLE CODE
1 <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	5 <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
DVD-BLURAY CODE	AUDIO-SB CODE
<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
<input type="checkbox"/> DVD <input type="checkbox"/> BLURAY <input type="checkbox"/> VCR	<input type="checkbox"/> AUDIO RECEIVER <input type="checkbox"/> SOUND BAR
STREAMING1 CODE	STREAMING2 CODE
5 <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	5 <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

Troubleshooting

Problem: The remote does not operate your device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT-CABLE, DVD-BLURAY, AUDIO-SB, STREAMING1/2). This tells the remote which device to operate.
- Remove any obstacles between the remote and the device. Make sure you're aiming the remote at the device's IR sensor.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AAA batteries, if necessary (see the Battery Installation section).

Problem: The remote can't be programmed to operate your device.

- If you are testing the remote while programming it, you may be too far away from the device or at a wrong angle. There must be an unobstructed path between the remote and the IR sensor on the device. Move closer and make sure you point the remote at the device you're trying to control.
- If you're using the Direct Entry programming method to enter the codes for your brand and the unit is still not functioning properly, try the auto, brand, or manual search method.
- To control combo units, like TV/VCRs or TV/DVDs, you must program the individual corresponding device keys to control each part of the combo unit. Once programmed successfully, the TV key controls the TV functions, and the DVD-BLURAY key controls the VCR or DVD functions.
- Make sure the batteries are fresh and are properly installed.

Problem: The remote doesn't perform commands properly.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT-CABLE, DVD-BLURAY, AUDIO-SB, STREAMING1/2). This tells the remote which device to operate.
- Make sure device is ready (for example, the DVD player has a disc loaded).
You may have pressed an invalid key for the mode the remote is in. If you're trying to enter a channel number directly, try pressing the ENTER key after entering the channel number as this is a requirement of certain models and brands.
There is a possibility that a programmed code may only be able to control some of your device features (for example, only turns a device on and off). To confirm that the device key is programmed with the correct code for maximum functionality, test the device. Attempt to control a variety of the device's functions with the remote. If some of the features of your devices don't work, try programming the remote with a different code in the list using the Direct Code Entry Method, until you find the code that allows the remote to control the majority of your device's functions. Different codes can provide different levels of functionality.

Problem: The POWER key does not light when you press a key.

- You may have pressed an invalid key for the mode the remote is in.
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT-CABLE, DVD-BLURAY, AUDIO-SB, STREAMING1/2). This tells the remote which device to operate.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AAA batteries, if necessary (see the Battery Installation section).

Problem: The remote will not change channels on device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT-CABLE, DVD-BLURAY, AUDIO-SB, STREAMING1/2). This tells the remote which device to operate.
- Press the ENTER key after you enter a channel number.
- Remove any obstacles between the remote and the device. Make sure to aim the remote at the IR sensor on the device.

Problem: The device's menu does not appear on the TV screen.

- Make sure you have connected the device to your TV properly and selected the correct input. (See your devices' Owner's Manuals for proper connection procedures.)
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT-CABLE, DVD-BLURAY, AUDIO-SB, STREAMING1/2). This tells the remote which device to operate.
- Menu access isn't supported for all brands. You may need to use your original remote control to access menu functions for some devices.

For more information, please visit www.RCAAudioVideo.com

Consumer Help Line: 1-800-420-7968

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal devices can cause malfunction and invalidate its warranty.

Limited Lifetime Warranty

Voxx Accessories Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty does not cover product purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

©2016 Voxx Accessories Corporation

Trademark(s) © Registered