





# Installation Manual: Toyota Sienna

Power Lift Gate System

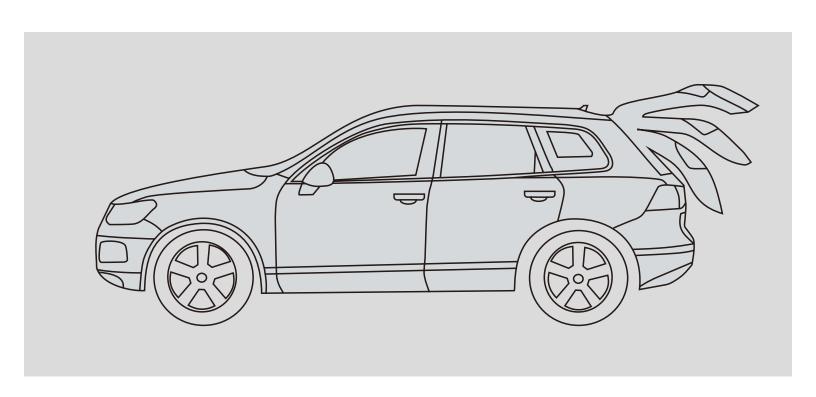


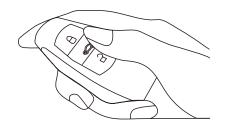


## **NOTE: Installation Precaution**

- 1. It is recommended to have this product installed by a professional to avoid damage caused by improper installation.
- 2. Do not attempt to disassemble or modify any components included within the kit. Unapproved modifications or evidence of tampering will void any warranty included with the product.
- 3. Before installation, inspect the vehicle's controls and interior/exterior for any damage or malfunctioning components. Report any damage or non conformities to the customer prior to installing the product.
- 4. Inspect the factory lift gate for proper operation and function of lights before installing this product. Improper opening or closing of the lift gate may interfere with the functionality of the Power Lift Gate System.
- 5. It is recommended to remove or cover any item of clothing (belt buckles, jeans rivets, buttons, etc) prior to installation of this accessory to prevent damage incurred to the vehicle during the installation.
- 6. Interior panels that have been removed should be set aside somewhere safe during the installation process to avoid damage.
- 7. When routing and securing wiring harnesses, care should be exercised to avoid any hot, sharp, or moving objects in the vehicle such as steering column, pedals, dash bracing, HVAC components, etc.
- 8. Do not deviate from methods of installation in this document. Any damage caused by improper wire routing, incorrect connections, wiring, etc. is not covered under the warranty.
- 9. Disconnect the negative (-) battery terminal before proceeding to installation. Wait at least 2 minutes after disconnecting the negative (-) battery terminal to disable the SRS and other systems in the vehicle. Any damage caused from failure to disconnect the battery is not covered under the warranty.
- 10. After installation, you must manually close the lift gate to initialize the Power Lift Gate System.

## Kit Details

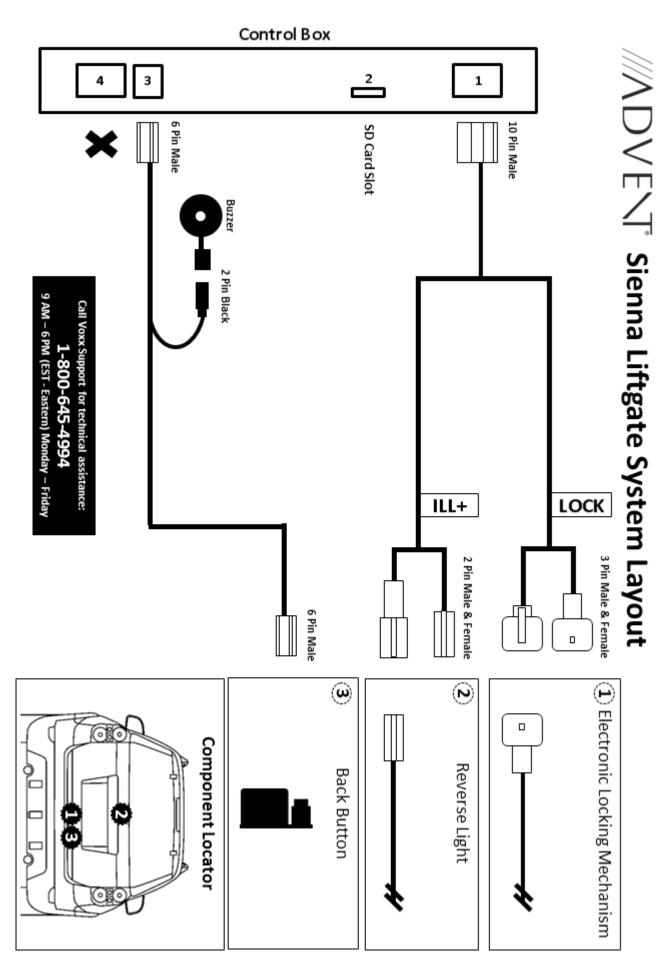

Page 3 of 12

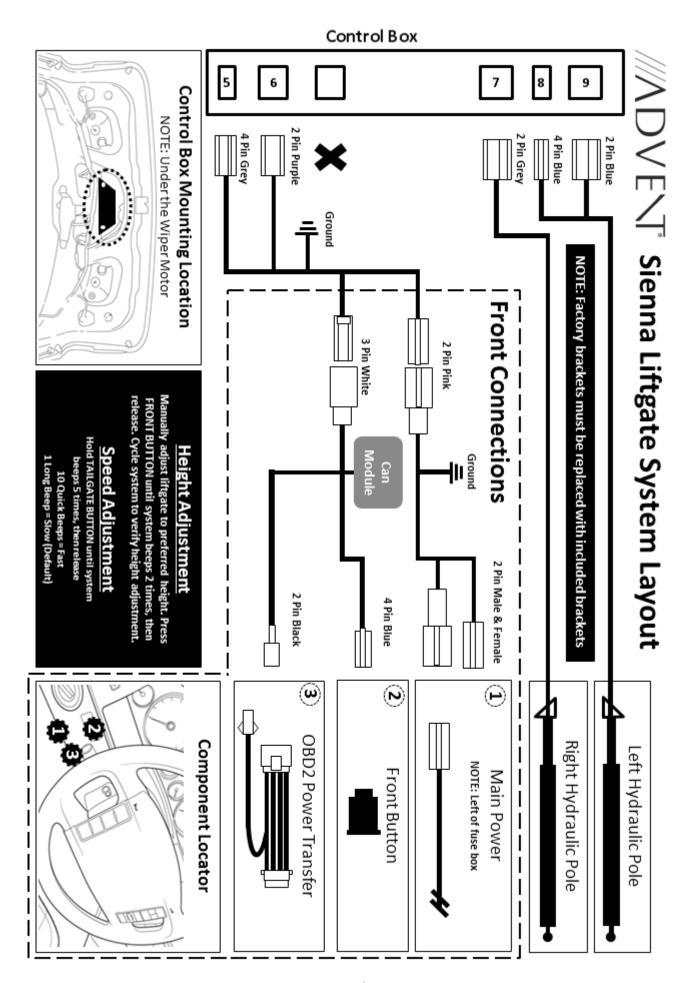

Page 4 of 12

## PREPARING FOR INSTALLATION

#### INSTALLATION PREPARATION

Before starting installation

- 1. Familiarize yourself with the installation instructions.
- 2. Inspect kit components to verify everything is present, there is no damage, and to familiarize yourself with the parts.

#### **VEHICLE PREPARATION**

- 1. Place protective coverings on vehicle.
- 2. Apply protective tape to all points before prying.
- 3. "IMPORTANT......IMPORTANT"




<u>Disconnect Negative Battery</u> Cable

#### **INSTALLATION:**

1. Using a moulding remover, disengage the clips and remove the lift gate center window trim garnish.

- 2. Disengage the clips and remove the left side window trim garnish.
- 3. Repeat for the right side window trim garnish.

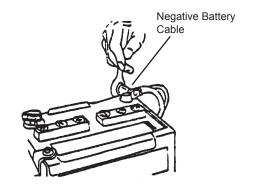






4. Insert a moulding remover into the slot and pry gently to disengage the clips on the back door trim panel. Pulling straight downward, disengage the rest of the clips and remove the back door trim panel.

 5. Use a moulding remover, gently disengage the claws and remove the lift gate pull handle.



7. Disengage the claws, and remove the driver's side front door scuff plate. Then remove the plastic nut and remove the driver's side kick panel.





 




- 8. Using a helper or supporting brace, support the lift gate in the full opened position.
- 9. Using a pry tool, remove the clip on the end of the OEM gas support struts for the lift gate.

Exercise caution when removing the support struts, as the lift gate is very heavy once removed.

10. Use a socket to remove the 2 bolts and the OEM lift gate support strut mounting bracket. Repeat for the opposite side.



12. Visually inspect and identify the LEFT and RIGHT side lift motors, as marked on the new power lift motors. Install the new lift motors to the correct LEFT and RIGHT sides, with the wire harness of the lift motor directed towards the vehicle body.











13. Remove the rubber plug from the lift gate above the lift motor. Carefully cut out the hole plug from the rubber cover.

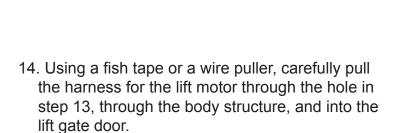

 Install the wire harness grommet into the hole cut out from the factory body plug.



16. Connect the supplied T-harness to the OEM push button release, located underneath the rear windshield wiper motor bracket.










17. Install the main control module onto the door frame with the 2 supplied bolts, as pictured. Verify the bracket is tight and does not cause any rattles or other undesirable effects in the lift gate.

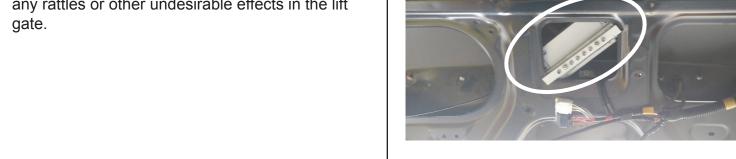

18. Using a moulding remover, remove the driver's side under dash side panel as pictured.



19. Remove the 2 Phillips head screws by rotating the steering wheel 90 degrees to the left, and then the other by rotating the steering wheel 90 degrees to the right. Then disengage the claws and remove the lower steering column shroud.



20. Connect the Canbus harness to the connector at the ignition key switch using the supplied T-harness. Route the wiring harness towards the driver's side under dash. Connect to the Power Transfer connector using the supplied T-harness, located at the fuse box. Then route the main wiring harness downward towards the kick panel.



21. Mount the supplied Power Lift Gate Opener Switch into the factory knock-out location.



22. Route the main wiring harness along the factory wiring harness towards the rear of the vehicle, underneath the scuff plate.



23. Continue routing the main wiring harness along the factory wiring harness towards the rear of the vehicle, underneath the scuff plate.



24. Using a fish tape or wire puller, pull the harness through the rear interior trim panel rearwards, and up towards the headliner.



25. Carefully pull the main wiring harness through the harness boot and into the lift gate door.

NOTE: Spraying a bit of soap/water solution inside the wire harness boot will help to pull the harness through easier.

- 26. Route the main wiring harness along the factory wiring harness towards the main control module. Route the other previously installed T-harness to the main control module, following the factory wiring harness, securing with cable ties as necessary.
- 27. Install the supplied lift gate handle cup with the open/close switch and route the wire harness to the main control module. Make all connections to the main control module per the diagram on the module.
- 28. IMPORTANT: Prior to closing, ensure door panel is re-installed. Manually close the lift gate to initialize the Power Lift Gate System. Function test the system to verify proper operation.





## THESE POINTS MUST BE CHECKED TO ENSURE A QUALITY INSTALLATION

|               | Head Light If the warning lights remains on, it may |                   | Massage Seats (if equipped)  |
|---------------|---|-------------------|--|
|               | indicate a system malfunction.                      |                   | Power Side Mirrors (if equipped)   |
|               | High Beams  |                   | Side Mirror Defogger (if equipped)   |
|               | Turn Signal Lights                                  | $\overline{\Box}$ | Front Windshield Defogger (if equipped)  |
|               | Tail Lights   |                   |  |
|               | Stop Lights   |                   | Navigation System (if equipped)  |
| $\Box$        | Backup Lights                                       | Ш                 | Rear Sunshade (if equipped)  |
|               | Hazard Lights                                       |                   | Cruise Control Light (if equipped)   |
|               | -   |                   | Steering Wheel Audio Control (if equipped)   |
| Ш             | Marker Lights                                       |                   | HVAC   |
|               | Dome/Courtesy Lights                                |                   |  |
|               | Panel/Switch Illumination                           |                   | Power Locks (if equipped)  |
|               | Accessory Controls/Illumination (if equipped)       |                   | Power Windows (if equipped)  |
|               | Rear Window Defogger                                |                   | Gauges   |
| $\overline{}$ | (if equipped)                                       |                   | Front Wiper/Washer   |
| Ш             | Key Sensor Buzzer                                   | $\overline{}$     | Use dil state Balance  |
|               | Fog Lights (if equipped)                            | Ш                 | Hood Latch Release   |
|               | Day Time Running Lights (if equipped)               |                   | Passenger Air Bag Switch (if equipped)   |
|               | Trunk/Tailgate/Bed Lights                           |                   | Rollover Side Curtain Air Bag Switch (RSCA)  |
|               | (if equipped) Glove Box Light (if equipped)         |                   | Horn   |
|               | ABS Light (if equipped)                             |                   | Seat Belt Warning Light  |
|               | Rear Wiper/Washer (if equipped)                     |                   | If the warning lights remains on, it may indicate a system malfunction.  |
|               |   | Ш                 | Air Bag Warning Light  |
|               | Clock (if equipped)                                 | _                 | If the warning lights remains on, it may indicate a system malfunction.  |
|               | Accessory Power Socket                              | Ш                 | Lamp Failure Sensor If the warning lights remains on, it may   |
|               | (if equipped) Starter                               |                   | indicate a system malfunction.   |
| ш             |   |                   | Track/Skid Control Light (if equipped)   |
|               | Audio/Video (if equipped)                           |                   | If the warning lights remains on, it may indicate a system malfunction.  |
|               | Power Sliding Door (if equipped)                    |                   | Tire Pressure Monitoring System (TPMS)   |
|               | 2 ,   |                   | Prior to TPMS activation and Pre-Delivery Service (PDS) of the vehicle the TPMS light will   |
|               | Convenience Memory Settings (if equipped)           |                   | blink when IG is turned on. After TPMS activation and PDS of the vehicle the TPMS light will illuminate for a few seconds and go off when IG |
|               | Heated Seats (if equipped)                          |                   | is turned on.  |