



RCRST02GR

2-Device Universal Remote Control User's Guide

The RCRST02GR 2-Device Universal Streaming Remote Control is the perfect solution for TV and streaming player home theater setups, with all the functionality you need to simplify home entertainment. It lets you control 2 devices from a single, easy-to-use remote.

RCRST02GR

Guía del Usuario del Control Remoto Universal para 2 Dispositivos

El Control Remoto para Transmisión de Video Universal para 2 Dispositivos RCRST02GR es la solución perfecta para configuraciones de teatro en casa reproductor de transmisión de video y TV, con toda la funcionalidad que usted necesita para simplificar el entretenimiento en su hogar. Le permite controlar dos dispositivos desde un sólo control remoto fácil de usar.

ENGLISH

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada Regulatory Information

CAN ICES-3 (B)/NMB-3 (B)

Avis d'Industrie Canada

CAN ICES-3 (B)/NMB-3 (B)

Step 1: Install your batteries

Your universal remote requires two AAA alkaline batteries (not included).

To install the batteries:

1. Press and push the battery compartment cover to remove it.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Push the battery cover back into place.

Battery Precautions:

 
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

Step 2: Program your Remote


Direct Code Entry

To program your remote to control up to two components, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Find the five-digit code for your brand of TV or streaming player in the enclosed code lists.
3. Press and hold the **SET UP** key until the indicator light turns on.
4. Release the **SET UP** key.




 5. Press and release the **TV** or **STREAMING** key. The indicator light blinks and then remains lit.

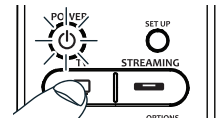


6. Enter the five-digit code, using the **REVERSE** (for digit 1), **PLAY/PAUSE** (for digit 2), **FORWARD** (for digit 3), **PREVIOUS** (for digit 4), **STOP** (for digit 5) and **NEXT** (for digit 6) key. When each digit is entered, the indicator light blinks.

 Note: If the indicator light blinks multiple times, you've entered an invalid code. Start from step 2 again.

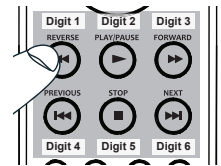

7. Aim the remote at the component and press the **POWER** key. The component should turn off.

 
Note: If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the Code Search Method that follows.



Auto Code Search

If your TV or streaming player does not respond after you have tried all the five-digit codes for your brand, or if your brand is not listed, try searching for your code via the Auto Code Search Entry Method. To program your remote via the Auto Code Search Entry Method, follow these steps:

 1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the **SET UP** key until the indicator light turns on.
3. Release the **SET UP** key.




4. Press and release the component key you wish the remote to control—the **TV** or **STREAMING** key. The indicator light blinks once and remains lit.

Important: Find the **OK** key on your remote (don't press it yet).

5. Press the **POWER** key to start the auto code search.

 The remote will automatically go through all the codes in its library one by one. A new code is sent every 4 seconds and the **POWER** key will blink when the new code is sent. This may take several minutes to complete, but make sure you keep watching your component until it turns off.

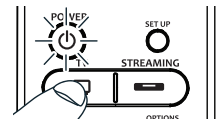

6. As soon as the component turns off, press the **OK** key within 4 seconds. The indicator light turns off.

 
Note: If you wait longer than 4 seconds to press **OK**, the remote goes to the next code—you will need to start the code search from step 1 again.



Manual Code Search

If your TV or streaming player does not respond after you have tried all the five-digit codes for your brand, or if your brand is not listed, try searching for your code via the Manual Search Entry Method. To program your remote via the Code Search Entry Method, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the **SET UP** key until the indicator light turns on.
3. Release the **SET UP** key.




4. Press and release the component key you wish the remote to control—**TV** or **STREAMING** key. The indicator light blinks once and remains lit.

Important: Find the **OK** key on your remote (don't press it yet). You will need to press this key quickly in step 6 below.



5. Press and release the **POWER** key until the component turns off.

 Important: You may have to press the **POWER** key up to 200 times.



6. As soon as the component turns off, press the **OK** key within 4 seconds. The indicator light turns off.

Note: If you wait longer than 4 seconds to press **OK**, the remote goes to the next code—you will need to start the code search from step 1 again.



Tour of the Remote

In most cases, the keys on this remote perform the same functions as the keys on your original remotes once you've programmed this remote to operate your components. Illuminated **POWER** key serves as an indicator light to provide feedback. It also turns your devices on and off.

SET UP puts the remote in code programming mode.

Device keys (**TV**, **STREAMING**) put the remote in the right mode to control your device. The **INPUT** toggles through your TV input choices.

OPTIONS, **RETURN**, and **HOME** perform the same functions as on your original streaming player remote.

MENU puts the remote in menu mode; it also accesses the same features as the key on your original remote in menu mode.

 
MUTE and **VOLUME +/-** keys adjust TV volume.

Arrow keys and **OK** act as navigation and selection keys in device guides and menu systems when the remote is in menu mode.

REVERSE, **PLAY/PAUSE**, **FORWARD**, **PREVIOUS**, **STOP** and **NEXT** keys control playback on your streaming player.

Red, **green**, **yellow**, and **blue** keys access additional features on your streaming player.


IMPORTANT: Because this remote controls more than one device, you must first "tell" the remote which device you wish to operate. That means, if you wish to operate your TV, you must first press the **TV** key to put the remote in the TV Mode. The remote stays in that device mode until you press a different device key. For example, if your remote is in TV Mode and you want to operate the streaming player, you must press the **STREAMING** key to change device modes.

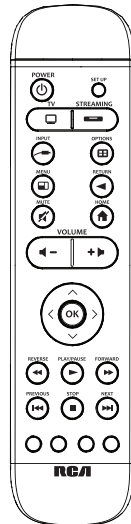

Master Power

By default, each time you press the **POWER** key, this remote automatically turns on or off the devices you've programmed it to operate. For example, if you want to turn both your TV and streaming player on at the same time, all you have to do is press the **POWER** key on this remote (if you've already programmed the remote to operate these devices). A single press will also turn them off.

 If you want to turn just one of the devices on or off, press the key for the device you want to turn on/off, and then press **POWER** within 3 seconds. For example, if you want to turn just your TV on, press the **TV** key on this remote, and then press **POWER** within 3 seconds.

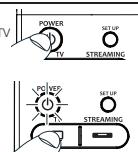

Code Retrieval

1. Press and hold the **Code Search** key until the LED lights up.
2. Press Device key you desire to check code number. LED flashes and remains on.
3. Press **Code Search** key and LED goes off.
4. Starting with **REVERSE** (1) key, press and release each word/number on the keypad in the following order: 1-5. The word/number that causes the LED to blink is the first number of the code. As you find each number of the code, write it down for reference. Then start with Word/Number 1 again.

Reverse = 1

Play/Pause = 2

Forward = 3

Previous = 4

Stop = 5

Next = 6

5. Repeat step 4 until you have retrieved all five numbers. After the fifth number is retrieved, the LED will turn off.

Tip: To exit the code retrieval at any time press **TV** or **Streaming** key.

Troubleshooting

Problem: The remote does not operate your device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, STREAMING). This tells the remote which device to operate.
- Remove any obstacles between the remote and the device. Make sure you're aiming the remote at the device's IR sensor.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AAA batteries, if necessary (see the Battery Installation section).

Problem: The remote can't be programmed to operate your device.

- If you are testing the remote while programming it, you may be too far away from the device or at a wrong angle. There must be an unobstructed path between the remote and the IR sensor on the device. Move closer and make sure you point the remote at the device you're trying to control.
- If you're using the Direct Entry programming method to enter the codes for your brand and the unit is still not functioning properly, try the auto, or manual search method.
- Make sure the batteries are fresh and are properly installed.
- Problem: The remote doesn't perform commands properly.**
 - Make sure the remote is in the correct mode by pressing the corresponding device key (TV, STREAMING). This tells the remote which device to operate.

- You may have pressed an invalid key for the mode the remote is in.
- There is a possibility that a programmed code may only be able to control some of your device features (for example, only turns a device on and off). To confirm that the device key is programmed with the correct code for maximum functionality, test the device. Attempt to control a variety of the device's functions with the remote. If some of the features of your devices don't work, try programming the remote with a different code in the list using the Direct Code Entry Method, until you find the code that allows the remote to control the majority of your device's functions. Different codes can provide different levels of functionality.

Problem: The POWER key does not light when you press a key.

- You may have pressed an invalid key for the mode the remote is in.
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, STREAMING). This tells the remote which device to operate.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AAA batteries, if necessary (see the Battery Installation section).
- Problem: The device's menu does not appear on the TV screen.**
 - Make sure you have connected the device to your TV properly and selected the correct input. (See your devices' Owner's Manuals for proper connection procedures.)
 - Make sure the remote is in the correct mode by pressing the corresponding device key (TV, STREAMING). This tells the remote which device to operate.
 - Menu access isn't supported for all brands. You may need to use your original remote control to access menu functions for some devices.

For more information, please visit www.rcaaudiovideo.com

Consumer Help Line: 1-800-420-7968

Limited Lifetime Warranty

Vox Accessories Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specific citation of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the retailer.

This Warranty does not cover product purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from state/province to state/province.

U.S.A.: Audiovox Return Center, 150 Marcus Blvd., Hauppauge, New York 11789

CANADA: Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Dcor 16, Mississauga, Ontario L5T 3A5

Television

Accurian.....	23314	JCM.....	25351
Admiral.....	11344, 13162	JVC.....	13162, 22336, 22533, 23225, 25414
Affinity.....	36223, 36224	KDS.....	22562
Akai.....	14241, 14424, 22542	KLH.....	14424
AOC.....	21264, 22316, 22321, 24265, 24466, 31156	LG.....	11136, 11565, 21442, 25641, 31462
Apex Digital.....	14355, 14424, 15153, 26144	LXI.....	11226, 11241, 11531, 11565
Asus.....	34355	MAG.....	22562
Audiovox.....	14525, 16635, 22235, 23213, 23216, 23314, 23456, 23463, 23656, 24122, 24564, 26212, 26456, 33216, 34553	Magnavox.....	11234, 11241, 11554, 14525, 21264, 21533, 23154, 23462, 24111, 24142, 24225, 25663
Auria.....	24466	Marantz.....	11241, 21361, 21533
Aventura.....	11554	Matsushita.....	12165
Axion.....	23656	Maxent.....	23154, 23156
Berkshire.....	11226	MB Quart.....	23463
Broksonic.....	13162	Megatron.....	11512, 11565
Carver.....	11241	Memorex.....	11521, 11565, 13162, 22524, 22533, 23244, 23543, 23642
Celera.....	14424	MGA.....	11521, 11565
Changhong.....	14424	Midland.....	11136, 11226, 11234
Citizen.....	11251	Mintek.....	24225
Coby.....	25513, 25525, 25526, 25611, 25614, 25615, 25616, 25622, 25623, 26615, 35145, 35556	Mitsubishi.....	11344, 11521, 11565, 16553, 23264
Commercial Solutions.....	11226, 21522	Motorola.....	11344
Craig.....	34614	MTC.....	11251
Crosley.....	11241	NAD.....	11531, 11565, 16315
Curtis.....	25631, 26144, 26341, 32226, 33651, 35432	Naxa.....	24535, 33445, 34465
Curtis Mathes.....	11226, 11241, 11251, 11344, 11512, 14241, 22516	NEC.....	21361, 22631, 23264, 25452
Daewoo.....	22516	NetTV.....	23154
Dell.....	16615, 23454	Nexus Electronics.....	25146
Denon.....	11512	Nikko.....	11565
Disney.....	22524, 23543	Norcent.....	14355, 21264, 22316, 22321
Dumont.....	11136	NuVision.....	24665
Durabrand.....	11554, 11565, 13162, 22524	levia.....	16535, 21166, 22353
Dynex.....	23244, 24364, 25151	Optimus.....	12165, 23642
Electrograph.....	23154	Optoma.....	21235
Electrohome.....	13162, 22533	Optonica.....	11344
Element.....	22562, 23533, 25146, 32531, 35362	Orion.....	13162
Elite.....	21536	Panasonic.....	11234, 12165, 16626, 16662, 21615, 23642, 23664, 24113
Emerson.....	11554, 11565, 13162, 21353, 22516, 22524, 23455, 23533, 24111, 24142, 25146	PARK.....	24535
Emprex.....	21441	Penney.....	11226, 11234, 11251, 11531, 11565
Envision.....	21264, 22316, 24265, 24466	Philco.....	11241, 11554, 16626, 21353, 22524, 24142
ESA.....	11554, 24111, 24142	Philips.....	11241, 11554, 21264, 21353, 21533, 23462, 24111, 24225, 25663, 25665
Fluid.....	32531	Pioneer.....	14162, 16611, 21361, 21536
Fujitsu.....	14536	Planar.....	22316
Funai.....	11554, 16626, 24142	Polaroid.....	14424, 16635, 22562, 23213, 23216, 24245, 24564
Gateway.....	23154, 23155	Portland.....	22516
GE.....	11226, 11234, 11565, 14424, 21522, 22166	Prima.....	23144, 23152, 23244
GFM.....	11554, 22524, 23455, 23533, 24142	Prism.....	11234
Gibraltar.....	11136	Proscan.....	11226, 21522, 24646, 25146, 25351, 35432
GoldStar.....	11565	Proton.....	11565
GPX.....	34541	Proview.....	22562
Haier.....	23143, 23144, 23152, 25452, 25516, 34465	Pulsar.....	11136
Hallmark.....	11565	Quasar.....	11234, 12165, 16662, 23642
Hannspree.....	21235, 31633	RadioShack.....	11226, 11565
Harmann/Kardon.....	11241	RCA.....	11226, 11234, 11341, 11344, 14162, 21522, 22166, 22516, 23236, 24245, 25154, 25334, 26245, 31525, 32226, 32435, 35432
Havermey.....	11344	Realistic.....	11565
Hewlett Packard.....	21641, 21653	Runco.....	11136, 21361
Hisense.....	14355, 24525, 25146	Sampo.....	23154
Hitachi.....	11512, 14162, 22446	Samsung.....	11251, 11565, 14241, 14425, 14545, 24366
iLo.....	21353, 22524, 22555, 24225	Sansui.....	11554, 13162, 22533, 23543
Infinity.....	11241	Sanyo.....	11241, 16253
Initial.....	24225	Sceptre.....	21255, 22334, 25564, 26445
Insignia.....	11554, 13162, 21442, 22116, 22235, 22641, 23244, 23543, 24142, 24245, 24364, 25151, 26216, 33646	Scotch.....	11565
Inteq.....	11136	Scott.....	11565, 22642
iSymphony.....	33265, 33345, 34465	Sears.....	11226, 11241, 11531, 11554, 11565
JBL.....	11241		

Seiki.....	11565, 32531, 35362, 35363
Sens.....	23456
Sharp.....	11344, 14553
Sheng Chia.....	11344
Sigmac.....	34614, 35144
Signature.....	11241
Silo Digital.....	36433
Sony.....	14541, 21115, 22556
Soundesign.....	11565
Spectroniq.....	22562
Squareview.....	11554
SunBriteTV.....	21462, 22353, 25564
Superscan.....	11344, 15111, 24111
Supersonic.....	23152, 24535, 33445
SVL.....	14355, 24142
Sylvania.....	11241, 11554, 16626, 21353, 22524, 23455, 23533, 24111, 24142
Symphonic.....	11554, 21353, 24111
Syntax.....	16535, 21166, 22353
Tandy.....	24111, 24142
Tatung.....	23155
TCL.....	26245
Technics.....	11234, 12165
Techwood.....	11234
Teknika.....	11241, 11251, 11521

Telefunken.....	14241
TMK.....	11565
TNCl.....	11136
Toshiba.....	11251, 11531, 16315, 16563, 21312, 22131, 22511, 22631, 24253, 31451
TruTech.....	22524
TVS.....	13162
Venturer.....	23456, 23463
Vidikron.....	11241, 21361
Vidtech.....	11565
Viewsonic.....	15111, 15144, 21264, 22235, 22261, 22422, 23154, 24265, 24364, 24466, 36165
Viore.....	22555, 24535, 25631, 33265, 33345, 34465
Vivitek.....	21312
VIZIO.....	15111, 15144, 23155, 23161, 26455, 31544, 36333
Wards.....	11136, 11226, 11234, 11241, 11251, 11531, 11565, 16315
Waycon.....	11531
Westinghouse.....	15144, 15152, 15153, 21115, 22256, 22643, 25452, 33265, 34465, 35133, 35434
White Westinghouse.....	13162, 22516
Wyse.....	21264
Zenith.....	11136, 11226, 11512, 11565, 13162, 21264, 21442, 22516, 25641, 31462

Accessory / Streaming Player / Accesorios / Reproductor de Transmisión de Video

Apple.....	31146	Patriot.....	34262
Asus.....	32566	Popcorn Hour.....	25355
Boxee.....	36144	QNAP.....	33524
D-Link.....	22221, 23114, 25153, 35666, 36144	RCA.....	34346
lomega.....	26613, 31653	Roku.....	25662, 33212
LG.....	34452	Seagate.....	31365
Logitech.....	34163	Sony.....	31432
Magnavox.....	34354	VIZIO.....	35665
Micca.....	35664	Western Digital.....	26613
Microsoft.....	24364	Xbox.....	24364
Netgear.....	24336, 24343, 34235, 34331	Xtreamer.....	31446