



Model PRO9056C
Owner's Manual

Single Channel Remote Car Starter


FEATURES :

- ◆ 2 Programmable RF Transmitters
 - ◆ Single Channel Receiver (capable of accepting 4 transmitters)
 - ◆ External Superheterodyne Receiver Antenna w/PushButton Switch & LED
 - ◆ On-Board Start Relay
 - ◆ On-Board Accessory Relay
 - ◆ On-Board Ignition 1 Relay
 - ◆ On-Board Ignition 2 Relay
 - ◆ Ignition 2 Relay Selectable On or Off During Cranking
 - ◆ On-Board Parking Light Relay
 - ◆ Ignition 3 / Shock By-Pass / GM VAT Output (relay required)
 - ◆ Tach Signal Learning Circuit
 - ◆ Two (+) and Two (-) Safety Shutdown Circuits
 - ◆ Alarm By-Pass Output
 - ◆ Accessory Outputs (Pulse Before & After Start, During Crank and After Shut Down)
 - ◆ Selectable Steady or Flashing Parking Lights for Run Indication
 - ◆ Selectable 5, 10, 15, 20, 45 and 60 Minute Run Time
 - ◆ Car Finder Mode
- Optional Door Unlock Feature For Vehicles Equipped With Power Doors
(Only operational while running under control of the remote start unit.)

PATENTED: www.voxxintl.com/company/patents

REMOTE STARTING THE VEHICLE

This will not start the vehicle if any one of the following situations exists:

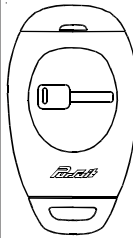

- The vehicle's hood lid is opened.
 - The gear shift selector is not in Park.
 - The brake pedal is depressed.
 - The safety control switch is in the Off position.
- 1) To start the vehicle, press and release the transmitter button two times within 2 seconds. The vehicle will start and remain running for the pre-programmed 5,10,15,20 minute run cycle. As a visual indication, the parking lights will flash or remain on depending on the setting by your installation center.

- 2) When you arrive at the vehicle, turn the ignition key to the ON position (not the spring loaded start position), then step on the brake pedal to disengage the remote starter. The vehicle will continue to run, but now on its own power.

NOTE: The engine will stop running before the pre-programmed run cycle has expired if you perform any one of the following functions:

- Press and the button on the keychain transmitter two times within 2 seconds
- Depress the brake pedal
- Open the vehicle's hood
- Place the unit in the safety control disabled mode.

PUSHBUTTON LED RECEIVER VALET/OVERRIDE/SAFETY CONTROL SWITCH

The Pushbutton LED switch located in the receiver allows you to temporarily disable the remote starting function of the system. This recommended whenever the vehicle is being serviced. To place the system in the service mode:

- 1) With the system disarmed/unlocked, and the ignition switch off, press and hold the Pushbutton, found on the windshield receiver, in.
- 2) Turn the ignition switch on, off, on, off, on, off.
- 3) The LED begins to flash two short flashes followed by one long flashes and continues this pattern until returned to normal mode of operation.

This puts the unit into the R/S Override mode indicating that the remote start is in the service mode and will not start from RF or any other input Posse or otherwise.

To Exit R/S Override Mode

- 1) With the system disarmed, Press and Hold the Push-Button, found on the windshield receiver, in.
- 2) Turn the ignition switch on, off, on, off, on, off.
- 3) The LED turns off indicating that the R/S unit is fully functional once again.

UNLOCKING THE VEHICLE:

If you have electric door lock and the Optional Unlock feature was added, with the vehicle running under command of the remote start unit, press and hold the transmitter button for 3 seconds until the doors unlock.

CAR FINDER MODE:

Anytime the vehicle is not running under control of the remote start unit, within operating range of the vehicle, press and hold the pushbutton of the hand held transmitter for 4 seconds to activate the car finder mode. The vehicle lights will flash for 30 seconds or until the pushbutton is again pressed and released.

TELEMATIC UPGRADE:

This system has the ability to have a telematic upgrade module connected to it. This is an upgrade that can give you control of certain functions of your vehicle from a Telephone, or in some cases a computer interface. Please check with your installation center for most recent Telematic Upgrades. If you had a Telematic Upgrade installed, the manual supplied with the upgrade unit will provide an operator's manual advising of the features of the system and means available to control these features of your vehicle.

PROGRAMMING NEW OR REPLACEMENT TRANSMITTERS (BANK 1)

Transmitter Model Name Is Found On Back Of Transmitter Case

- 1) Turn the ignition key to the on position.
- 2) Press and release the valet/programming switch 3 times. (Siren Chirps)
- 3) Press the Lock Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4) Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems.

For additional channel programming beyond the 1 option button, you can use any unused button or combination of buttons not in use.

In other words, to access option channel 5, 6, 7, you would do the following:

From step 3 above:

- a) Press and release the valet/programming button 4 additional times to get to channel 5, then Press any unused transmitter button or button combination to program.
- b) From a, press and release the valet/programming button 1 time to get to channel 6, then press any unused transmitter button or button combination to program.

c) From b, press and release the valet/programming button 1 time to get to channel 7, then press any unused transmitter button or button combination to program.

NOTE: Not all systems have channels above 3, check with your installation center for options your system may or may not have.

NOTE: Certain systems have the ability to utilize channels 6 and 7 for driver priority programming. For driver priority, the vehicle must be equipped with this feature, and the optional feature must be set up and installed by your installation center. Once this feature is added when the unlock button of transmitter 1 is used, it will set driver 1 priority and when the unlock button of transmitter 2 is used it will set driver 2 priority. In this situation, the unlock button can be programmed into two receiver channels, unlock, channel 2 and driver priority 6 or 7. In no other circumstance will the system allow a transmitter button to be programmed into 2 receiver channels at the same time.

FUNCTION SETTING CHART

To be completed by installer

Run Time	5 Min <input type="checkbox"/>	10 Min <input type="checkbox"/>	15 Min <input type="checkbox"/>	20 Min <input type="checkbox"/>
While Running Unlock	Yes <input type="checkbox"/>	No <input type="checkbox"/>		
Lights	Pulse <input type="checkbox"/>	Steady <input type="checkbox"/>		

**To purchase replacement transmitters
or to get additional product information go to:
www.pursuitcarsecurity.com**

© 2013 Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, NY 11788

128-8790b