


Doorbell Chime Humming After Video Doorbell Installation? Here's the fix!

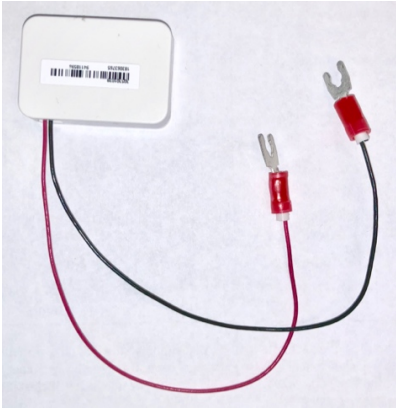


Install this chime adapter to the chime connectors inside the home.


1. Locate the chime box in your house and remove the cover (image)



2. Locate the 2 chime terminals with wires attached. If there are 3 wires (3 wires using all 3 terminals), use only the terminals marked "Front" and "Trans"*.

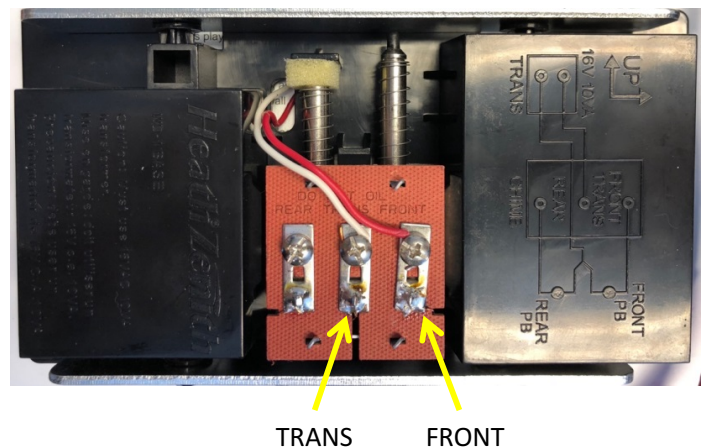


3. Slightly loosen each terminal and slide one each of the chime adapter fork connectors on each terminal. Retighten. Test the doorbell for full function.

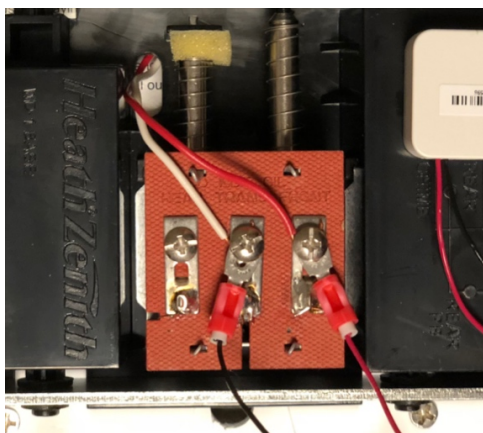

Either connector can be used on either terminal

4. Remove the film on the double sided tape on the chime adapter assembly and stick the assembly either front or side facing . Reinstall the cover.

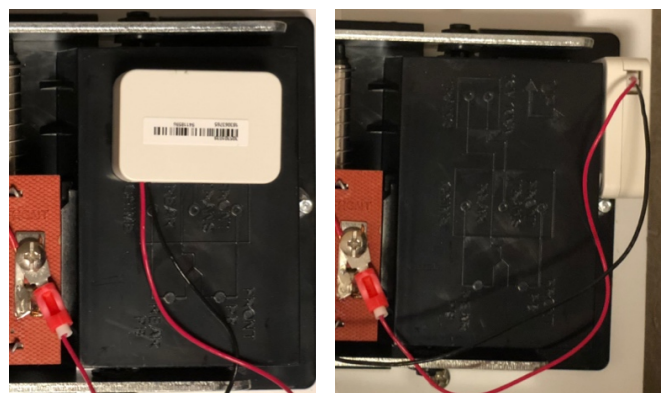

**Assumes front door "ding-dong" chime is being used not rear door.*