


It is important to read this user manual prior to using your new product for the first time.

Important safety instructions

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE FOR FUTURE REFERENCE

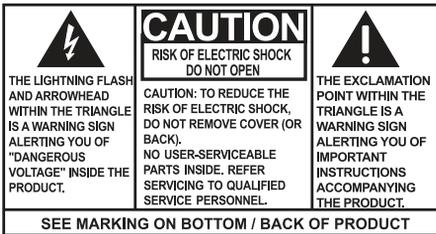

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the back of apparatus.

Important battery precautions

Warning: Your product contains a battery and charging system which is designed to work in temperatures that do not exceed 50°C (122°F). Leaving this product in a closed automobile or the trunk of an automobile where temperatures may exceed 50°C may result in permanent battery damage, fire, or explosion. Please remove your product from the automobile when you exit, do not place your product in the trunk of your automobile, and do not leave your product in any location where temperatures may exceed 50°C.

Ecology

Your product must be disposed of properly according to local laws and regulations. Because this product contains a battery, the product must be disposed of separately from the household waste.

Precautions for the unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

Headset safety

To use a headset safely, please keep the following in mind:

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience ringing in your ears, turn down the volume or stop using the headset.
- Do not use a headset while driving a motorized vehicle or riding a bike. It may cause a traffic hazard and is illegal in many areas.
- Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that can't hear sounds around you.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

Manufacturer/Responsible Party
VOXX Accessories Corporation
3502 Woodview Trace, Suite 220,
Indianapolis, IN 46268

1-317-810-4880 (No technical /product support is available via this number. This phone number is for regulatory matters only.)

Visit www.rcaudiovideo.com for technical support



Industry Canada Regulatory Information

CAN ICES-3 (B)/NMB-3 (B)

Avis d'Industrie Canada

CAN ICES-3 (B)/NMB-3 (B)



Contents

Important safety instructions

IMPORTANT SAFETY INSTRUCTIONS.....	1
Important battery precautions	2
Ecology.....	2
Precautions for the unit	2
Headset safety	2

FCC Information.....	3
-----------------------------	----------

Contents	4
-----------------------	----------

Before you begin

Copyright warning.....	6
Back up your data	6
Unpacking your player.....	6
Computer system requirements.....	6
Connecting to the computer.....	7
Charging the player.....	7

Managing files on your RCA Player

Using Windows Explorer	8
Deleting files from the player.....	9
Disconnecting the player from the PC.....	9

General controls

Turning the player on and off.....	10
Installing the belt clip.....	10
Removing the belt clip.....	10

Playback music files

Playing music files.....	11
Music playback controls	11

Record

Start recording	13
Recording.....	13

Playing Back Your Recordings

Playback recorded files	14
Recording Playback.....	14

FM Radio

Playing FM radio	16
Storing and recalling preset stations.....	16
Playing back FM radio recordings.....	17

Settings

Changing the Player's settings.....	18
Language	18
Memory info.....	18
Firmware version	18
Reset.....	18

Additional information

Tips and troubleshooting.....	19
Visiting RCA website	20
Specifications.....	21

Warranty information

12 Month Limited Warranty	22
---------------------------------	----

Before you begin

Dear RCA Customer,

Thank you for purchasing the Player. This product will play mp3 and Windows Media™ audio (WMA) content.

Copyright warning

This player is for your personal use only. Unauthorized recording or duplication of copyrighted material may infringe upon the rights of third parties and may be contrary to copyright laws.

Back up your data

As with any portable player, you must back up the drive regularly. The manufacturer is not responsible for lost data.

Unpacking your player


All of the items listed below should have been packed in the box with your player.

- RCA player (contains user manual)
- Quick Start Guide
- Earphones

Computer system requirements

- Pentium III 500MHz or higher recommended
- Windows XP (service pack 1 or higher), Windows Vista, Windows 7, or Windows 8
- Internet Explorer 6.0 or higher with Internet access
- Windows Media Player 10 or higher
- 128MB RAM (256MB recommended)
- CD-ROM drive capable of digital audio extraction
- USB port (2.0 recommended)
- Sound card

Connecting to the computer

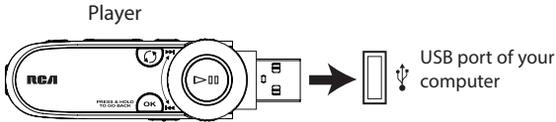

- Remove the cap for the USB port from the player body and connect the player to your PC as shown.
- Go to My Computer (XP users) /Go to Computer (Vista, 7, and 8 users) in the Start menu, find and open the drive letter associated with the player (i.e. RCA MP3). Copy music to the device by dragging and dropping files using Windows Explorer.
- In the Windows system tray, click the **Safely Remove Hardware** icon  and then select the device with the appropriate drive letter from the list of devices. When the Safe to remove hardware message appears, disconnect the player from the computer and enjoy media on the go.

- It may take several seconds for the player to be detected. Click **View -> Refresh** in My Computer or Windows Explorer to make sure the player has been detected.
- The player is capable of transferring files at USB 2.0 speeds. If a USB 2.0 port is available on your computer, use it to connect to your player. The player is still backward compatible with older USB ports; however, you will not be able to take full advantage of the potential speed increase.
- **IMPORTANT:** Do not disconnect the player from the PC during file transfer.



Charging the player


The battery should be fully charged before using your device for the first time. Make sure you slide the **ON/OFF** switch to **ON** before connecting the player for charging. The battery will automatically charge when the player is connected to a USB port. It should be **charged for at least 4 hours** before using for the first time.

Managing files on your RCA Player

Before you begin using your RCA Player, you'll want to copy your music to the player.

Using Windows Explorer

1. Open the player in Windows Explorer.
2. Transfer audio files to the MUSIC folder of the player by dragging and dropping files using Windows Explorer.

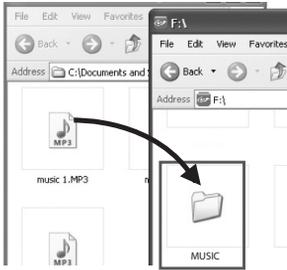

Deleting files from the player

You may delete any files transferred to the player.

1. Connect the player to your computer.
2. Open the player in Windows Explorer and then navigate to the folder containing the files.
3. Select the files you want to remove and then press the Delete key on the keyboard of your PC.

Disconnecting the player from the PC

Windows will show the player as a removable disk:


1. In the Windows system tray, click the **Safely Remove Hardware** icon  and then select the device with the appropriate drive letter from the list of devices.
2. When the **Safe to remove hardware** message appears, unplug the player from the PC.



IMPORTANT: Do not disconnect the USB connection during file transfer. Doing so may corrupt system files or the files being transferred.




General controls

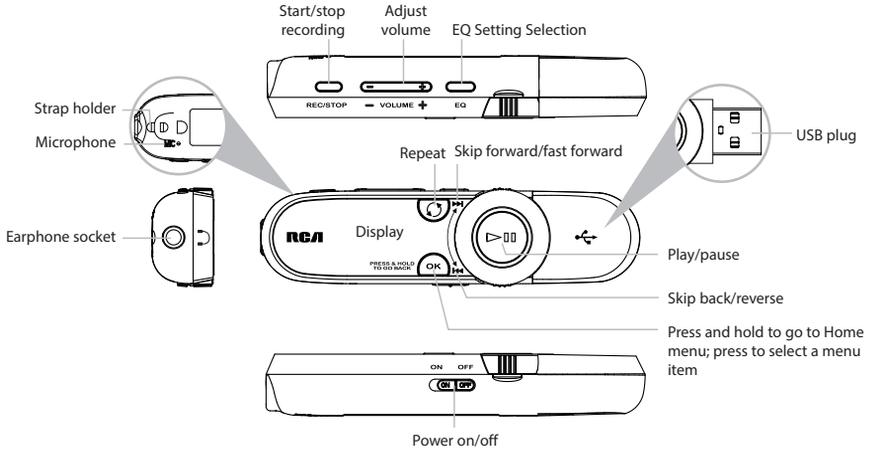


Turning the player on and off

Turn player on/off: Slide **ON/OFF** button.

Installing the belt clip

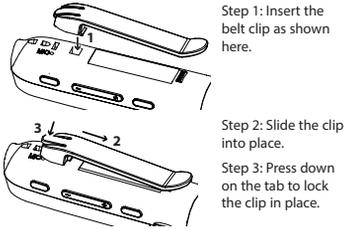

Removing the belt clip

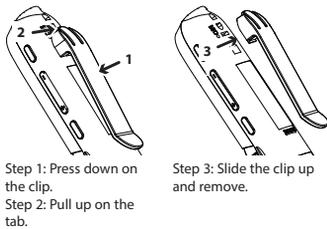

Playback music files

Playing music files

1. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to MSC.
2. Press **OK** to enter MSC mode.

Note: In all playback modes, press and hold **OK** to return to the menu.



Music playback controls

Skip back/forward knob	Rotate the skip back/reverse knob counter-clockwise to skip to the previous file; rotate and hold to scan backward within a file; rotate the skip back/reverse knob clockwise to skip to the next file; rotate and hold to scan forward within a file.
	Starts/pauses playback.
- VOLUME +	Increases or decreases the volume during playback.
EQ	Select equalization setting.
	Toggles play mode. Options available: Normal, Repeat one, Dir Normal, Dir All Repeat, Repeat All, Random all and Intro.
Press OK during playback	Shows Repeat, Equalizer, Replay, Replay times, Replay gap mode options.
Press OK when playback is paused/ stopped	Shows selecting Local folder, Delete file and Delete all options.

Option menu (music playback)

Press **OK** at the playback screen to show the Option menu of Repeat, Equalizer, Replay, Replay times, Replay gap mode. Press **OK** when playback is paused or stopped to show the Option menu of Local folder, Delete file and Delete all. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight an option and then press **OK** to confirm the selection or change the setting.

The following options are available when playback is paused or stopped:

- **Local folder** – Browses the local folder for selecting a media file to play.
- **Delete file** – Delete the selected file from the directory.
- **Delete all** – Delete all files from the directory.

The following options are available during playback:

- **Repeat** – Toggles play mode. Options available: Normal, Repeat one, Dir Normal, Dir All Repeat, Repeat All, Random all and Intro.
- **Equalizer** – Toggles equalizer mode. Options available: Natural, Rock, Pop, Classic, Soft, Jazz, DBB.
- **Replay** – To repeat a section between two points A and B in your currently playing file. When "A-" of "A-B" blinks on the display, rotate the skip back/reverse knob clockwise at the beginning of your repeat section. When "B-" of "A-B" blinks on the display, rotate the skip back/reverse knob clockwise at the end of your repeat section. The section will repeat continuously according to the Replay times and Replay gap you set.
- **Replay times** – Options available: 1-10 replay times.
- **Replay gap** – Options available: 1-10 seconds.

Record

Start recording

1. Press the **REC/STOP** button, or from the main menu. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to REC and press **OK** to enter REC mode.
2. Press ▷▢ to start recording.
3. Press **REC/STOP** or ▷▢ to pause or resume recording.
4. Press and hold ▷▢, **OK**, or **REC/STOP** to save the recording.

Note: In all playback modes, press and hold **OK** to return to the menu.



Recording

Press ▷▢ or REC/STOP	Starts/pauses recording.
Press and hold ▷▢ or REC/STOP	Stops and saves recording.
Press OK when recording is stopped	Shows the Option menu.
Press OK when in Option menu	Confirm menu option.
Press and hold OK when in Option menu	Back to previous navigation level.

Option menu (record)

Press **OK** when recording is stopped to show the Option menu. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight an option and then press **OK** to confirm the selection or change the setting.

The following options are available:

- **Local folder** – Browses the local folder for selecting a location to store the recording.
- **Rec type** – Selects recording type. Options available: 32 kbps, 64 kbps, 128 kbps, 192 kbps and 384 kbps.
- **Record gain set** – Set the record gain from 0 to 7.

Playing Back Your Recordings

Playback recorded files

1. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to RPL.
2. Press **OK** to enter RPL mode.
3. Press $\triangleright \square$ to start playback.



Note: In all playback modes, press and hold **OK** to return to the menu.

Recording Playback

Skip back/forward knob	Rotate the skip back/reverse knob counter-clockwise to skip to the previous file; rotate and hold to scan backward within a file; rotate the skip back/reverse knob clockwise to skip to the next file; rotate and hold to scan forward within a file.
Press $\triangleright \square$	Starts/pauses playback.
- VOLUME +	Increases or decreases the volume during playback.
Press OK during playback	Shows Option menu.
Press OK when playback is paused/ stopped	To select a recorded file from local folder or delete the file.
Press OK when in Option menu	Confirm menu option.
Press and hold OK when in Option menu	Back to previous navigation level.

Option menu (playback recordings)

Press **OK** at the playback screen to show the Option menu of Repeat mode. Press **OK** when playback is paused or stopped to select a recorded file from local folder, or delete the file. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight an option and then press **OK** to confirm the selection or change the setting.

The following options are available when playback is paused or stopped:

- **Local folder** – Browses the local folder for selecting a media file to play.
- **Delete file** – Delete the selected file from the directory.
- **Delete all** – Delete all files from the directory.

The following options are available during playback:

- **Repeat** – Toggles play mode. Options available: Normal, Repeat one, Dir Normal, Dir All Repeat, Repeat All, Random all and Intro.
- **Replay** – To repeat a section between two points A and B in your currently playing file. When "A-" of "A-B" blinks on the display, rotate the skip back/reverse knob clockwise at the beginning of your repeat section. When "B-" of "A-B" blinks on the display, rotate the skip back/reverse knob clockwise at the end of your repeat section. The section will repeat continuously according to the Replay times and Replay gap you set.
- **Replay times** – Options available: 1-10 replay times
- **Replay gap** – Options available: 1-10 seconds

FM Radio

The radio uses the earphones as an antenna. For better reception, extend the earphone cable as far as possible. Note that you can also adjust for noisy FM by shifting the earphone cord position.



Playing FM radio

To turn the radio on:

1. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to FM.
2. Press **OK** to enter FM mode. The frequency screen appears.

Note: In all playback modes, press and hold **OK** to return to the menu.



To tune the radio:

- Rotate and hold the skip back/reverse knob clockwise or counter-clockwise to start scanning through the frequency range. The player stops scanning when it detects the next station.
- Rotate and hold the skip back/reverse knob clockwise or counter-clockwise to step through the frequency range.

To turn the radio off:

- Turn the player off
- Press and hold **OK** to display the menu and select other modes.

Option menu (FM Radio)

Press **OK** at the playback screen to show the Option menu. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight an option and then press **OK** to confirm the selection or change the setting.

The following options are available:

- **Save** – To save the current station as a preset station.
- **Record** – To record the current station and enter the Record mode.
- **Delete** – To delete a preset station.
- **Delete all** – To delete all preset stations.
- **Auto search** – To start auto searching.
- **Normal Band** – To switch to normal band.
- **Japan Band** – To switch to Japan band.

Storing and recalling preset stations

You can store up to 20 preset stations in the player.

To store the currently playing station as a preset:

1. Press **OK** to display the Option menu.
2. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight **Save** and then press **OK**. If all 20 preset station numbers are occupied, the player will not store the new selected station.

To delete a preset station:

1. Press **OK** to display the Option menu.
2. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight **Delete** and then press **OK**.
3. Press \triangleright to toggle to the desired preset station and then press **OK** to delete the station.

To listen to a preset station:

When the radio is playing, press ▷⏏ to select a desired preset station.

Recording FM radio

You can record the radio and play back recordings as well as copy the recordings (WAV files) to your PC.

To record the currently playing radio station:

1. Press **OK** to display the Option menu.
2. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight **Record** and then press **OK**. This will enter Record mode. See the Record section for more details.

Playing back FM radio recordings

To play back a recording:

1. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to RPL.
2. Press **OK** to enter RPL mode.
3. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to a desired file. Press ▷⏏ to start voice playback. See the Playing Back Your Recordings section for more details.

Settings

Changing the Player's settings

1. Rotate the skip back/reverse knob clockwise or counter-clockwise to navigate to **SYS**.
2. Press **OK** to enter **SYS** mode.
3. Rotate the skip back/reverse knob clockwise or counter-clockwise to highlight an option and then press **OK** to confirm the selection or change the setting.

Note: In all playback modes, press and hold **OK** to return to the menu.



Language

- Changes the language of the player menus.
 - Options: Simple Chinese, Trad Chinese, English, Japanese, Korean, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish, Russian, Turkish, Hebrew, Thai, Hungarian, Romanian, Arabic, Greek, Indonesian

Memory info

Displays the total memory size and the percentage that had been used.

Firmware version

Displays the firmware version.

Reset

Returns all settings to factory default.

Additional information

Tips and troubleshooting

Cannot delete files on the player.

- You can delete files on the player using your computer.
 1. Connect the player to your computer.
 2. Open the player in Windows Explorer and navigate to the folder containing the files.
 3. Select the files you want to remove and then press the Delete key on the keyboard of your PC.

Player repeats same tracks or all tracks.

- Repeat play is turned on. Press the  button to change to the Normal playback setting, or press **OK** to access the settings menu and set the repeat option to Normal.

Audio distorted at high volume.

- Turn down the volume.

The audio tracks on my player keep skipping or popping.

- You'll need to rip the audio track again – make sure you close all other applications on your PC when you record.
- Try recording with Error Correction setting turned on.

Player turns itself off.

- Your player turns itself off if you leave it idle for 3 minutes.

The player cannot be turned on.

- Battery is empty. Connect the device to a USB port to recharge the battery.
- Please go to www.rcaaudiovideo.com for more helpful troubleshooting tips.
- To resume normal operation, it may be necessary to cycle the power off and back on.

Player does not respond to key presses.

- If your player stops responding to key presses, you can reset it by cycling the power off and back on using the **ON/OFF** switch. Most of your settings will be preserved; only the settings that you have changed after your last power off will be lost.
- This player may temporarily cease to function if subjected to electrostatic disturbance. To resume normal operation, it may be necessary to cycle the power off and back on.

Player cannot play WMA songs.

- Secure music is not supported by the player, please make sure the songs are not DRM protected. (Digital Rights Management).

Player cannot play AAC songs.

- AAC songs are not supported by this player.

The player takes a long time to read files in a folder.

- File reading may take longer if too many files are put in a single folder. Re-organize your files into a number of folders.

Song information is not showing correctly.

- Song information may not match your current player's language setting. Change the language setting.
- Only English language is supported.

The player reports that it is full.

- You have filled the capacity of the internal memory of the player.

Cannot playback tracks on the player.

- Make sure audio tracks are encoded in the mp3 or Windows Media formats at supported bitrates.
- Bitrates support by the player:
mp3 – 32 to 320 kbps
wma – 48 to 192 kbps
- WMA files may be DRM protected and this player does not support playback of protected files.

Cannot play Audible files.

- Audible files are not supported by this player.

Cannot playback songs downloaded from my paid Music Server Provider subscription service.

- The player does not support DRM content, please make sure the songs are not DRM protected. (Digital Rights Management).

Cannot transfer subscription music content to the player.

- The player does not support DRM content, please make sure the songs are not DRM protected. (Digital Rights Management).

Visiting RCA website

Please visit www.rcaaudiovideo.com for:

- Product registration
- Latest firmware
- User manual
- Frequently asked questions (FAQ)
- Customer service and technical support information

Specifications

Hardware

- Dimensions: 91mm x 23mm x 25mm
- Unit Weight: 20 g
- Stereo Headphones jack

USB Drive

- External USB Drive: When connected to a computer via USB, the player is capable of storing any file type allowing the user a fast, convenient method of storing, retrieving, and transferring files. This includes word processing files, presentations, spreadsheets and any other computer files.
- Capacity: 4GB

Warranty information

12 Month Limited Warranty

Applies to RCA Portable Media Players

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media Players, home networks or vehicle electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.



For Customer Service
Visit Our Website At
www.rcaudiovideo.com
Product Information, Photos,
FAQ's, User Manual

©2018 VOXX Accessories Corporation
Indianapolis, IN
Trademark(s) ® Registered

TH2014 IB EN 2018 03