



Model : PRO-OE3

TRANSMITTER PROGRAMMING GUIDE

The transmitters included with the security system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the security system. Although the security system in the vehicle has either a 3 or 4 channel receiver, depending on the model, the transmitters included with the system are capable of transmitting 7 distinct signals. This allows you to program each transmitter to more than one vehicle in two car families, and also allows you to change which button(s) control certain functions of the system.

(Example: Transmitter channel 5 can be programmed to activate Receiver channel 2.) Refer to the chart below for access to each of the transmitter channels, and for the standard factory button assignments.

TRANSMITTER		SYSTEM RECEIVER	
CHANNEL	BUTTONS	CHANNEL	FUNCTION
1	ARM DISARM	1	**Remote Arm & Disarm **Remote Emergency Panic Remote Door Lock & Unlock
2	OPTION 1	2	* Pulsed Output for Accessories
3	OPTION 2	3	* Switched Output for Accessories
4	ARM DISARM & OPTION 1	4	* Switched Output for Accessories
5	OPTION 1 & OPTION 2		-----
6	ARM DISARM & OPTION 2		-----
7	ALL 3 BUTTONS		-----

128-5309B
1 OF 5

Some of the more common accessories for these additional channels are;

- *AS 9554 Remote Garage Door Interface
- *AS 9075 Remote car starter
- *AS 9153 Remote window roll up
- *AS 9256 Remote trunk release relay

** Only Available With Remote Alarm Systems

In addition to the information provided above, the PRO-OE3 transmitter is capable of utilizing different transmitter icon pads. These replacement pads may be used with your transmitter, depending on the specific options that may have been installed or added to your security/keyless entry system. (If your transmitter appears more like one of the units shown on page 4 of this manual, use the text reference along side the specific transmitter for programming your unit).

PROGRAMMING THE TRANSMITTERS

It is important to remember that during programming, each individual step of the procedure must be executed within 15 seconds of the previous step. When the 15 second time limit is allowed to expire, the system will automatically terminate the programming mode. This is indicated by a long chirp from the siren.

Additionally, the system will store codes from up to four different transmitters. If a 5th transmitter is programmed to any receiver channel, then the first transmitter programmed to that channel will be erased from the system's memory.

Non alarm models will flash the parking lights only to confirm the transmitter code has been learned and stored.

Transmitter PD 10 is referenced during the program procedure listed below.

To Program replacement or additional transmitters:

1. Enter the vehicle, and turn the ignition key to the " on " position.
2. Flip the valet switch "on" - "off" - "on" - "off" - "on" - then "off".
3. The dash L.E.D. will flash one time, and the sounding device will beep one time, indicating the system is ready to accept programming for receiver channel 1.
4. Press and hold the Arm/Disarm button for 4 seconds or until the sounding device emits a long beep, indicating the signal has been stored into memory.
5. If you have additional transmitters (up to 4) that need to be programmed, repeat step 4 for each transmitter.
6. Flip the valet switch "on" then "off".
7. The dash L.E.D. will flash two times, and the sounding device will beep two times, indicating the system is ready to accept programming for receiver channel 2.
8. Press and hold the Option 1 or Option 2 transmitter button (s) for 4 seconds or until the sounding device emits a long beep, indicating the signal has been stored into memory.
9. If you have additional transmitters (up to 4) that need to be programmed, repeat step 8 for each transmitter.

10. Flip the valet switch "on" then "off".
11. The dash L.E.D. will flash three times, and the sounding device will beep three times, indicating the system is ready to accept programming for receiver channel 3.
12. Press and hold the selected Option 1 or Option 2 transmitter button (s) for 4 seconds or until the sounding device emits a long beep, indicating the signal has been stored into memory.
13. If you have additional transmitters (up to 4) that need to be programmed, repeat step 12 for each transmitter.
14. Flip the valet switch on then off.
15. The dash L.E.D. will flash four times, and the sounding device will beep four times, indicating the system is ready to accept programming for receiver channel 4.
16. Press and hold the remaining Option 1 or Option 2 transmitter button (s) for 4 seconds or until the sounding device emits a long beep, indicating the signal has been stored into memory.
17. If you have additional transmitters (up to 4) that need to be programmed, repeat step 16 for each transmitter.
18. Turn the ignition key off. The sounding device will emit one short beep followed by one long beep indicating the system has terminated the program mode.


TRANSMITTER BATTERY REPLACEMENT

You will notice a decrease in transmitter range as the battery condition deteriorates. Transmitter battery replacement is recommended at least every 10 to 12 months, depending upon how frequently the transmitter is used.


The transmitter has a small red L.E.D. built into the case. This L.E.D. can be used to indicate battery condition. If the L.E.D. does not illuminate, then the battery is discharged, and must be replaced.


To replace the transmitter battery,


1. Remove the small phillips head screws from the transmitter.
2. Carefully unsnap the top cover of the transmitter from the bottom cover.
3. Remove the discharged battery, making note of the location of the + and - contacts, and replace with a new type GP 27A 12 volt battery.
4. Replace the transmitter cover, taking care not to damage the L.E.D. or switches on the circuit board, and secure with the small phillips head screw.

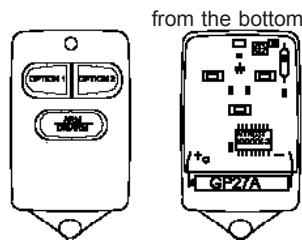



If TRANSMITTER PD #10:
 your transmitter appears as the unit shown on the left, All programing information listed on the previous pages apply.







TRANSMITTER PD #11:
 If your transmitter appears as the unit shown on the left, for programming, you would substitute the  icon for the ARM/DISARM reference on page 2 during step 4.







TRANSMITTER PD #12:
 If your transmitter appears as the unit shown on the left, for programming, you would substitute the  icon for the ARM/DISARM reference on page 2 during step 4. Substitute the  icon for the OPTION reference on page 2 during step 8.



TRANSMITTER PD #13:
 If your transmitter appears as the unit shown on the left, for programming, you would substitute the  icon for the ARM/DISARM reference on page 2 during step 4. Substitute the  icon for the OPTION reference on page 2 during step 8. Substitute the  icon for the OPTION reference on page 3 during step 12.



TRANSMITTER PD #14:
 If your transmitter appears as the unit shown on the left, for programming, you would substitute the  icon for the ARM/DISARM reference on page 2 during step 4. Substitute the  icon for the OPTION reference on page 2 during step 8. Substitute the  icon for the OPTION reference on page 3 during step 12.



**ORDER FORM FOR 3 BUTTON TRANSMITTER
MODEL NO. PRO OE3**

IMPORTANT : To help us expedite your order, please print all of the information legibly, and mail this form and your payment according to the instructions below.

1. Name : _____

Address : _____

City : _____ State : _____ Zip Code : _____

2. Telephone Number : (_____) _____

3. Enter the total number of transmitters required here : _____

4. List model number of your actual transmitter pad as shown on page 4 of this manual:

5. The cost per transmitter is \$ 65.00. _____

6. Enter the total amount enclosed here : _____

(New York state residents must include the appropriate sales tax.)

7. Method of payment; check one of the boxes below.

Mastercard Visa Check or money order * (do not send cash)

*** Make checks payable to Audiovox Corporation**

8. Credit Card Number : _____

9. Credit Card Expiration Date : _____

Credit card purchasers can order additional or replacement transmitters by phone. Simply dial 1 - 800 - 645 - 4994, and follow the instructions from the operator interface.



10. Mail this form, and your check, to;

**AUDIOVOX CORPORATION
150 MARCUS BLVD. HAUPPAUGE, N.Y. 11788
Attn: Transmitter Ordering Department**

Form No. 128-5309B

**128-5309B
5 OF 5**